


Industrial Manufacturing of Glass Ampules

with digital DIAS Pyrometers
PYROSPOT



Pyrometer in the manufacturing process of glass ampoules

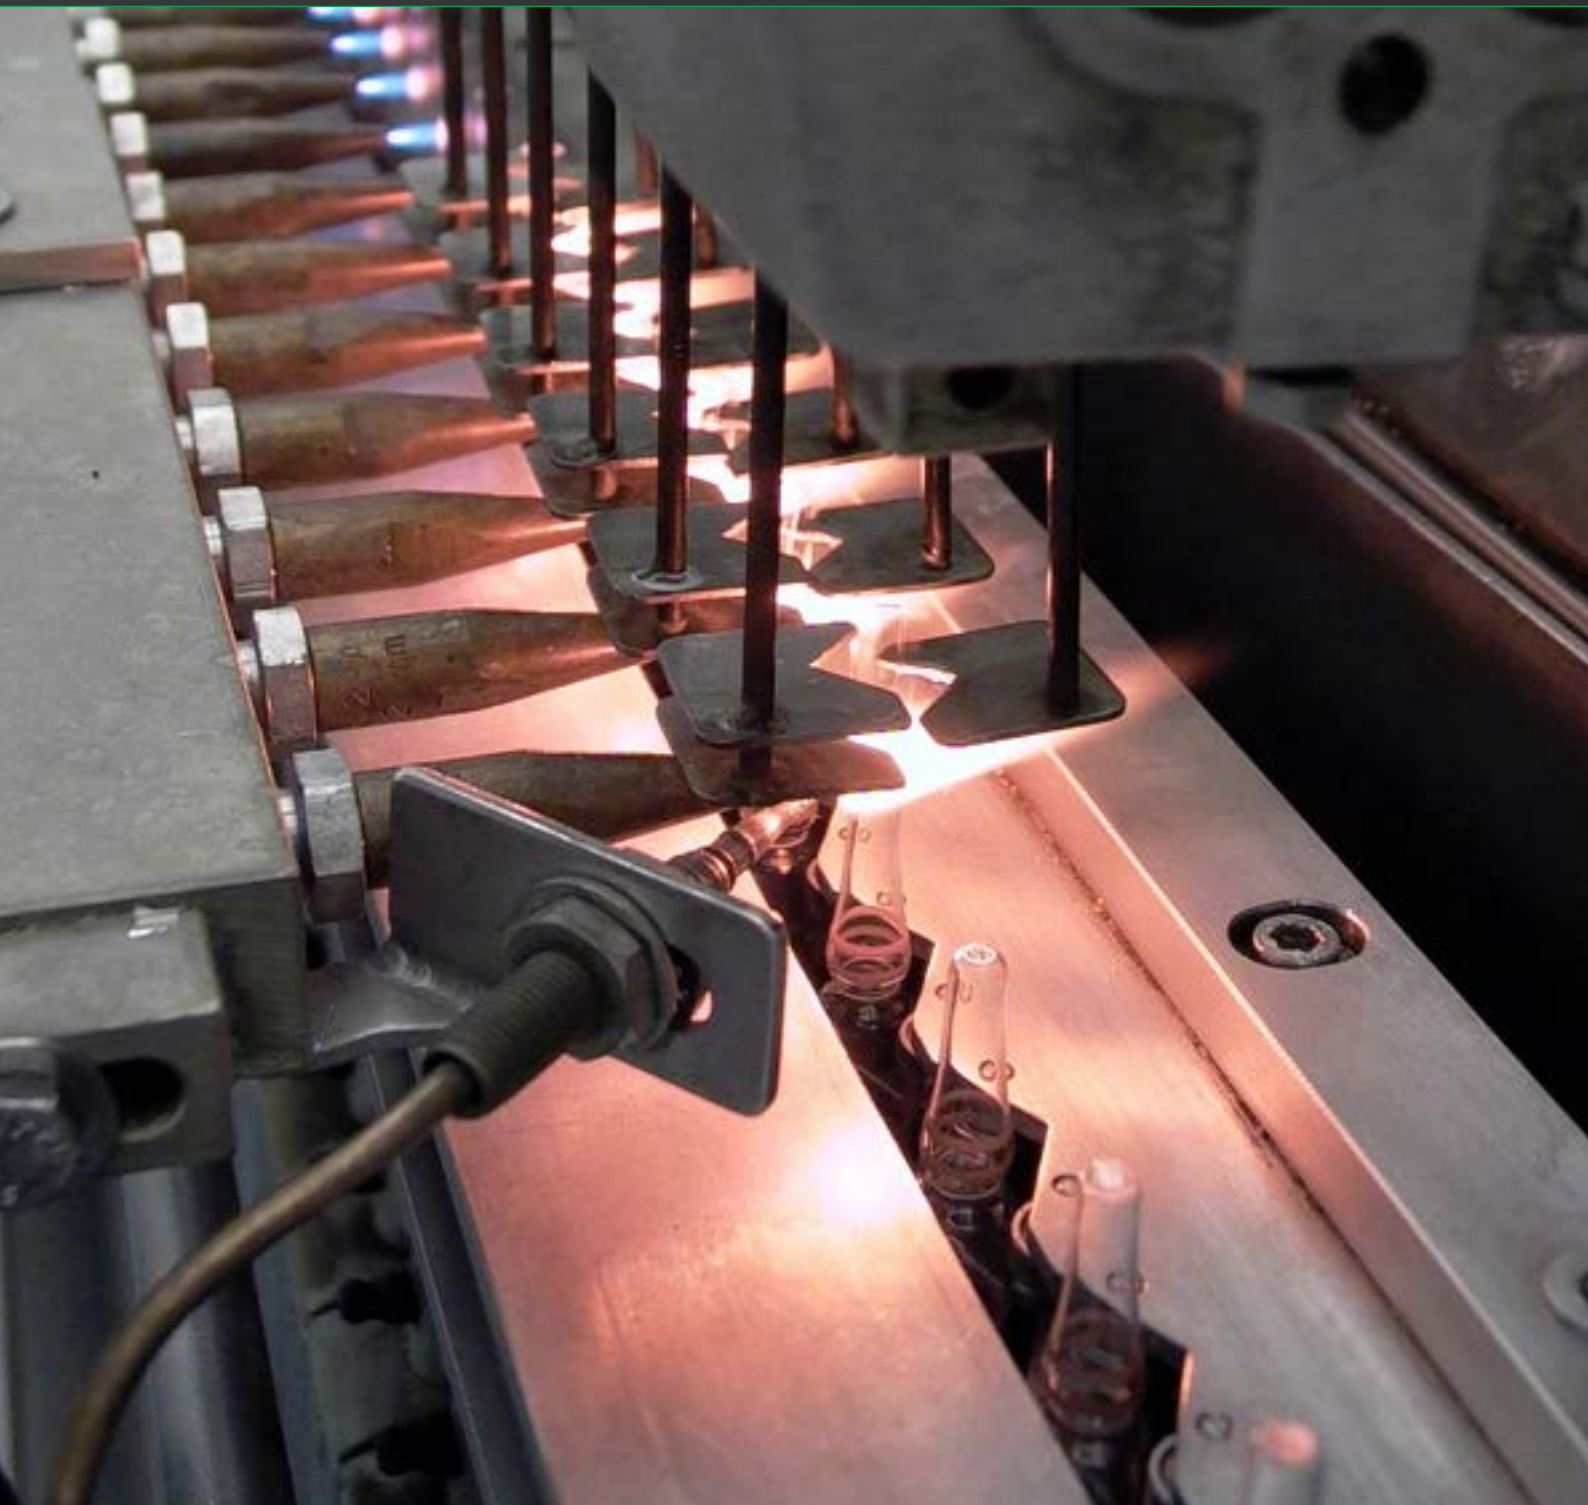

Glass ampoules in medical and cosmetic industries serve mainly as containers for the respective products. They are also used as thermal release element in fire detection systems in sprinkler systems and other temperature-controlled release mechanisms. In the manufacturing of these glass ampoules a finished glass raw body is heated and then reshaped to the respective form. These usually full automated processes are proceeding in a horizontal rotating table with several gas burners. The ampoules are heated by the burner to a certain temperature that is crucial for the further processing.

An important part in the process control is to capture the temperatures exactly and quickly. Temperature measurement devices used for this purpose need to be quick, exact and especially unaffected when they are measuring through the gas burner.

The particular DIAS pyrometer PYROSPOT DT 40F, DA 44F and DA 47F offer exactly these features. With measurement ranges between 100 °C and 2500 °C, mutable optical proportions and fast acquisition times from 5 ms, the pyrometers measure through the burner flame to the glass surface.

For extremely small ampoules or very fast production processes the high-end pyrometer PYROSPOT DA 10F kann be used. This pyrometers measures in ranges between 200 °C and 2500 °C with a acquisition time of only 1 ms and can realize target sizes from 1 mm. The burner flame has no influence on the measurement.

All pyrometers have a standard analogue output available or a digital interface for integration in the process control.



PYROSPOT DT 40F, DA 44F and DA 47F

PYROSPOT DA 10F

Picture credits: „Pharmazeutische Flamerichtung ampoules“ Copyright by Isreal Melendez Jr, „Fully automatic filling and sealing machine for the production of medicines in ampoules“ Copyright by Nikolaj Kondratenko, „health care / medical concept: isolated set of ampoules on white background“ by studioVin. 2013. Used with a licence from shutterstock.de



We are certified
for many years
according to
ISO 9001

Phone: +49 351 896 74-0
Fax: +49 351 896 74-99
E-Mail: info@dias-infrared.de
Web: www.dias-infrared.com

DIAS Infrared GmbH
Pforzheimer Straße 21
01189 Dresden
Germany